

 













# Installation Guide

## Speaker Stand




Illustration	#	Description	Qty
	A	Metal base	2
	B	Tube with twist-lock	2
	C	Retention ring	2
	D	Weighted base	2
	H	Universal bracket	2
	I	Retention screw	2
	K	Universal bracket cover	2
	O	M5X12 screw	4
	P	M5X18 screw	4
	Q	M4X20 screw	2
	R	M5 washer	4
	S	M4 washer	4
	T	Thumb nut	2



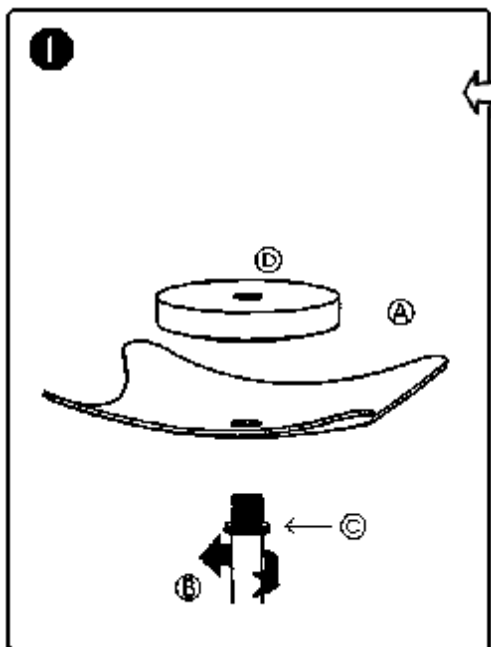


**1** Screw on the retention ring (C) onto the threaded end of tube (B). Insert assembled tube (B) into base (A) and screw on weighted base (D).

To adjust the height of the tube, turn the twist lock collar on the tube counter clockwise to release the sliding mechanism, adjust to the desired height and turn the collar clockwise to lock it into position.

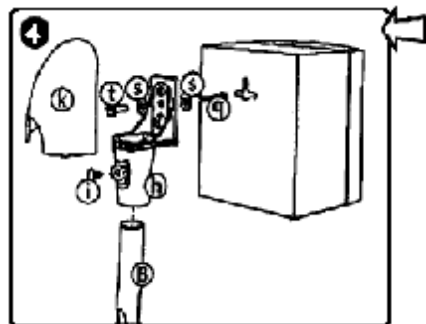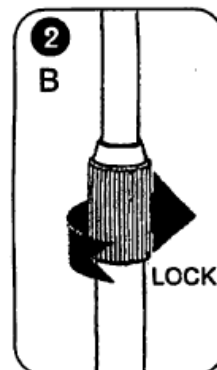
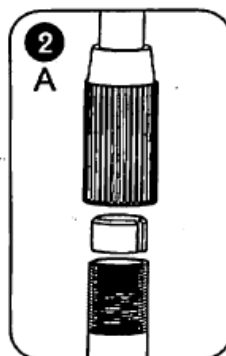


**4** FOR LOUDSPEAKERS WITH KEYHOLE TYPE FIXTURES, secure the universal bracket (H) to the upright pole using screw (I). The speaker cable should be threaded through the pole and bracket as shown in fig 3a or 3b.

Assemble thumbnut (T), washers (S) and M4 screw (Q) as shown. Attach the speaker and if necessary, tighten the thumbnut. Finish by attaching bracket cover (K).

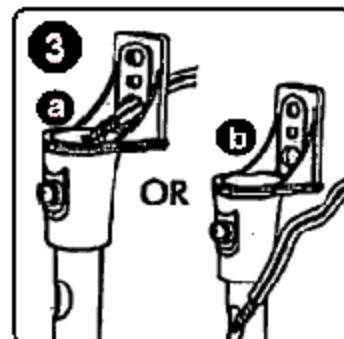

FOR LOUDSPEAKERS WITH THREADED HOLES, Secure universal bracket (H) to upright using screw (I). The speaker cable should be threaded through the pole and bracket as shown in fig 3a or 3b. The speaker should be fixed to the bracket (H) with washer (R) and either screw (O) or (P) depending on the size of the screw holes on your speakers. Finish by attaching bracket cover (K).

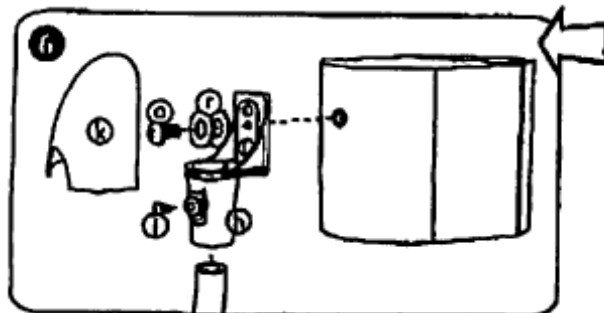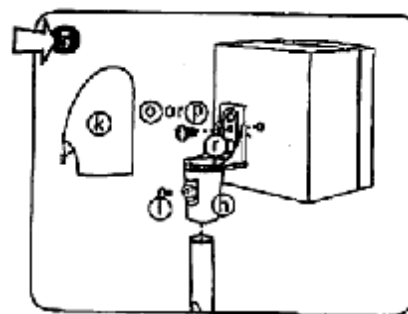

#### BOSE ACOUSTIMASS LOUDSPEAKERS

Attach universal bracket (H) to pole using screw (I). Feed cable down pole as shown in fig 3a or 3b. Attach speaker to bracket using screw (O) and washer (R). Finish by attaching bracket cover (K).